


## ANY S-BOX™ THAT IS TO BE INSTALLED INTO STONE — EITHER SURFACE MOUNTED *OR* IN ITS HIDDEN "CHAMELEON" MODE NEEDS THE INVOLVEMENT OF THE STONE FABRICATOR AND HIS CUTTING TOOLS . .








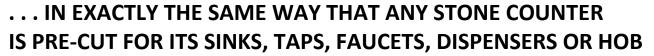





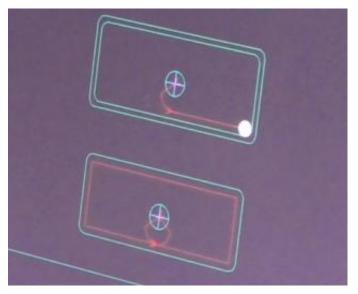



# FOR 30mm MATERIAL (*OR THICKER*) THE DIMENSIONS AND THE 20mm DEEP REBATE (IF REQUIRED) ARE ENTERED INTO A COMPUTER CONTROLLED ROUTER MACHINE . . .

... AND THE TOOL FOLLOWS
THE CUTTING ROUTE AND
INSTRUCTIONS IT IS GIVEN



#### THE CENTRE POINTS ARE DRILLED FIRST







#### FOLLOWED BY THE CUTTING OF THE HOLE ITSELF




THE TOOL THEN RETURNS TO THE WORKTOP TO CARRY OUT ITS SECOND GRINDING PROCESS AND CREATES THE REBATE (at -20mm DEPTH) FOR THE S-BOX™ COLLAR TO SIT ON LATER.











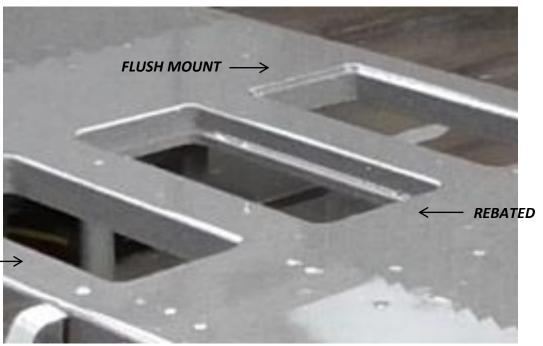


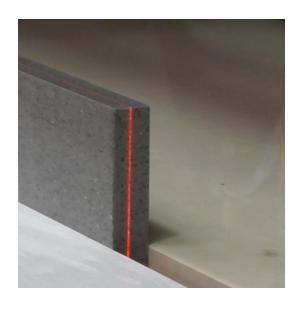




## THE CUSTOM TOP IS MADE BY 'SLICING' AN OFF-CUT PIECE OF THE COUNTER MATERIAL

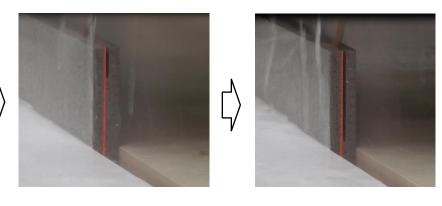

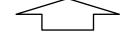

THE CIRCULAR SAW FOLLOWS A LASER LINE, AND CAREFULLY CUTS THE THICK MATERIAL DOWN INTO THE 12mm THICKNESS REQUIRED. THIS IS DONE IN A SERIES OF 8-10 PASSES TO ENSURE THE INTEGRITY OF THE STONE.

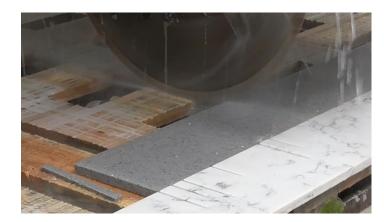

CROSS-CUTTING CREATES THE FINAL SIZE . . . READY FOR THEIR CORNERS TO BE ROUNDED.








THE CORNERS ARE TYPICALLY DONE BY HAND TO ENSURE THAT THE CUSTOM TOPS WILL NEATLY MARRY WITH THE INTERNAL RADIUS OF THE HOLES. THE EXPERIENCE AND SKILL OF THE WORKTOP SUPPLIER ENSURES THAT EVERYTHING WILL FIT BEAUTIFULLY ON SITE.



WITH HOLES AND TOPS NOW READY, THE COUNTERTOP CAN GO TO SITE . . . FOR THE S-BOX™ UNITS TO BE INSTALLED! <sup>©</sup>



### At last! There is a 'designer' solution for countertop power!

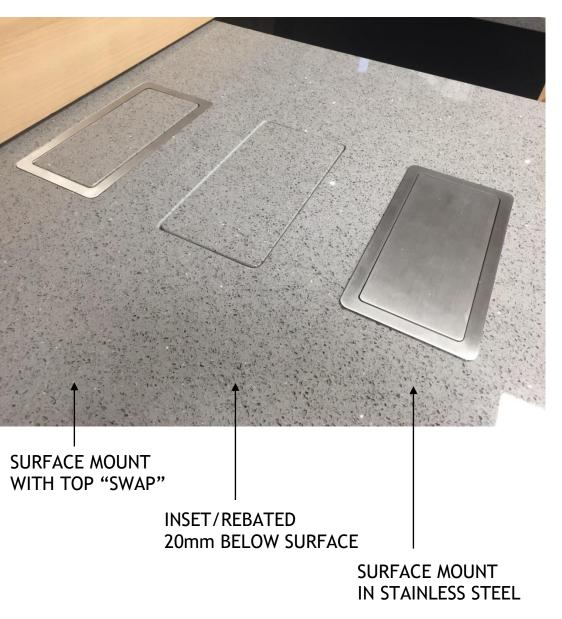

### **JUST FIT IT YOUR WAY!**







A British Design Innovation













# IN NATURE, CAMOUFLAGE IS A MATTER OF SURVIVAL IN DESIGN, IT'S A MATTER OF STYLE

S-BQX